


OFFROOM

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


WATCH THIS INSTALL

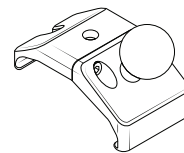


Mounting Base Installation Instructions

Ford Ranger 2024-2025 (North America) | 2022-2025 (Australia)

COMPONENTS

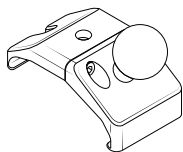


Mounting Base



L-key

01


Using the L-key provided, slightly loosen the mounting base screws to ensure both plates move.

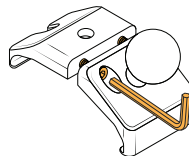

02


Align rear mounting base plate tabs with the gaps on either side of any top vent louver as shown (01).

Engage and hook those rear tabs against the top vent bezel.

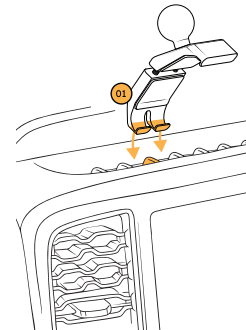

03


Lower the front mounting base plate, engage and hook it to the touchscreen bezel as shown (02).

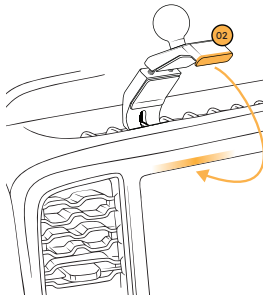

04

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

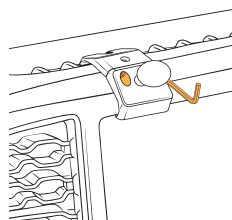

POSITIONING

Fits up to 4 Offroom mounting bases along the center console position as shown.

